


# System 6800

## With Roller Cams only.

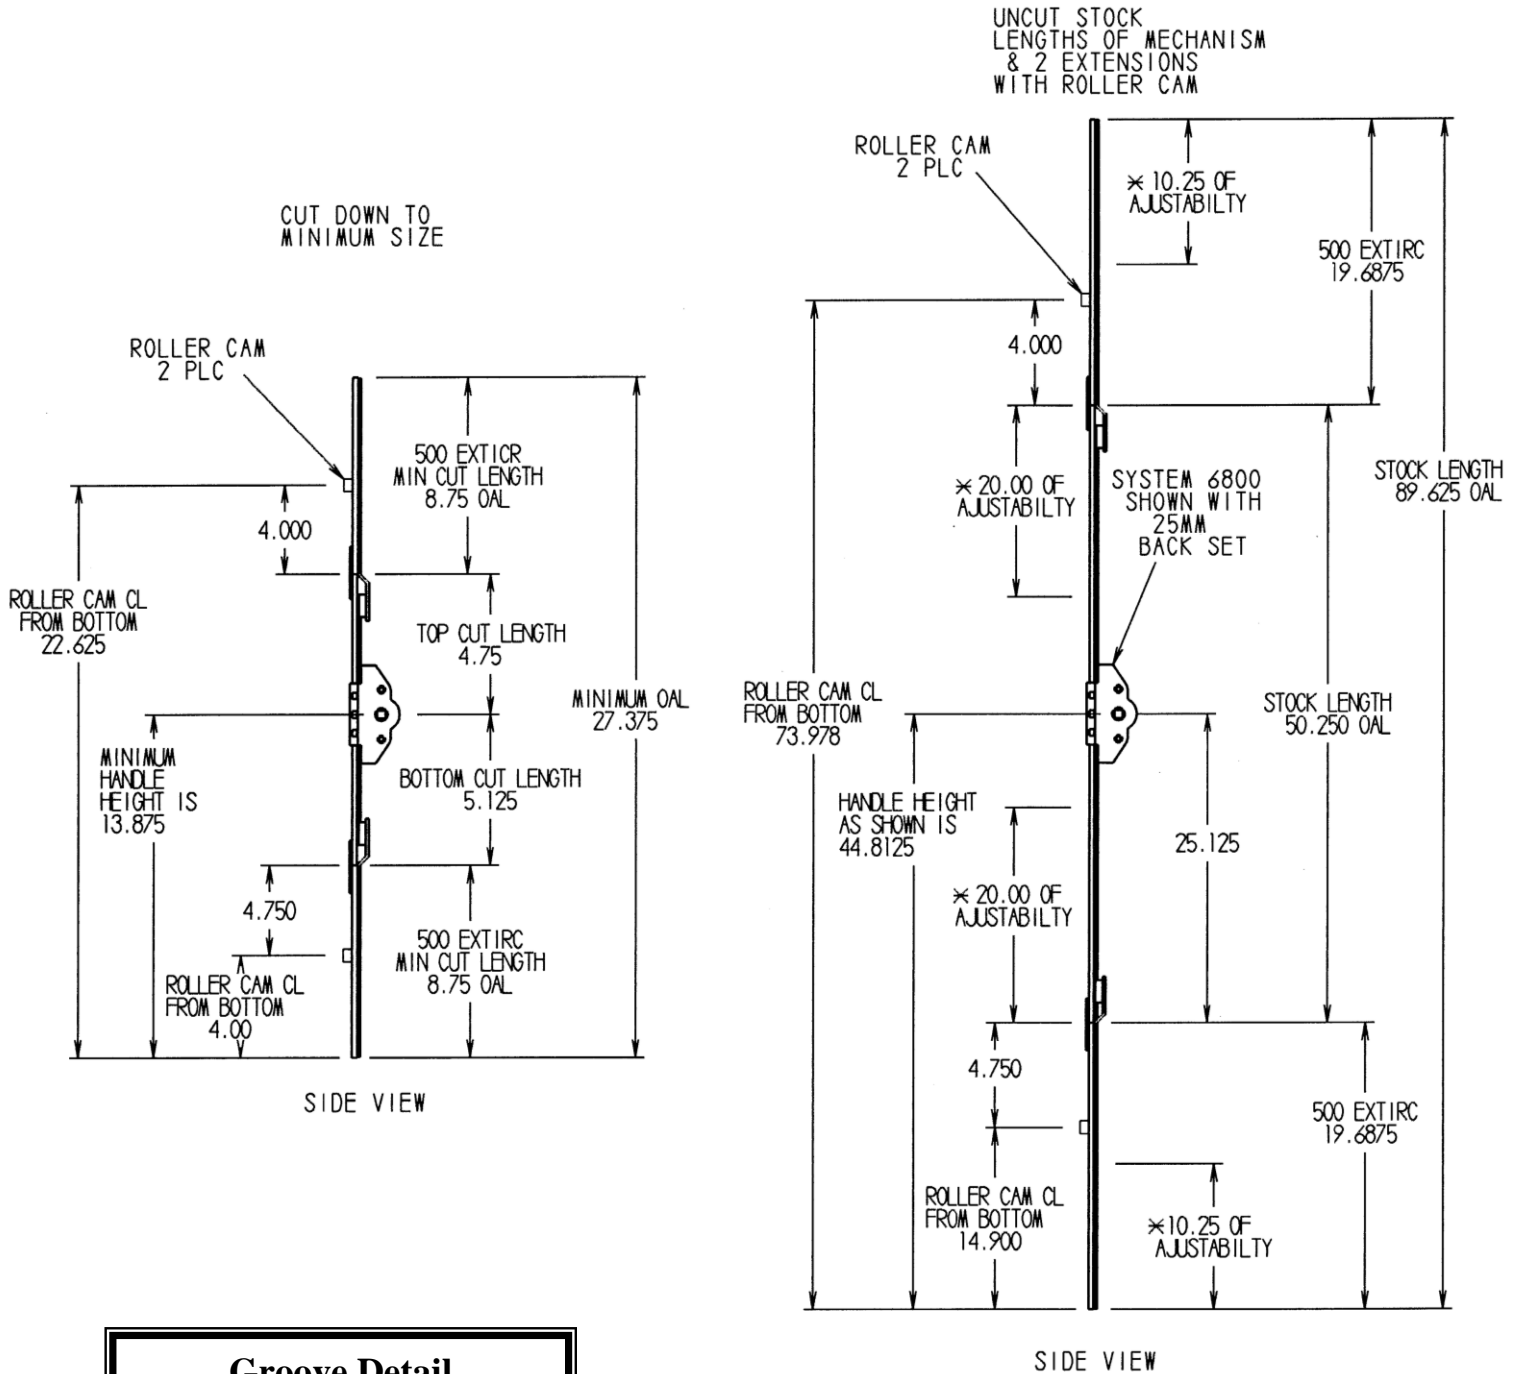

- **ALL DADDOE SLOTS MUST BE FREE OF PARTICULATE AND SAWDUST BEFORE AND AFTER INSTALLATION.**
- **TO ADJUST: CUT WITH METAL SAW WITHIN ADJUSTABILITY AREAS.**
- **FOR TALLER SASHES, SIMPLY ADD MORE EXTENSIONS.**