


The #2210 Entrance Mechanism.

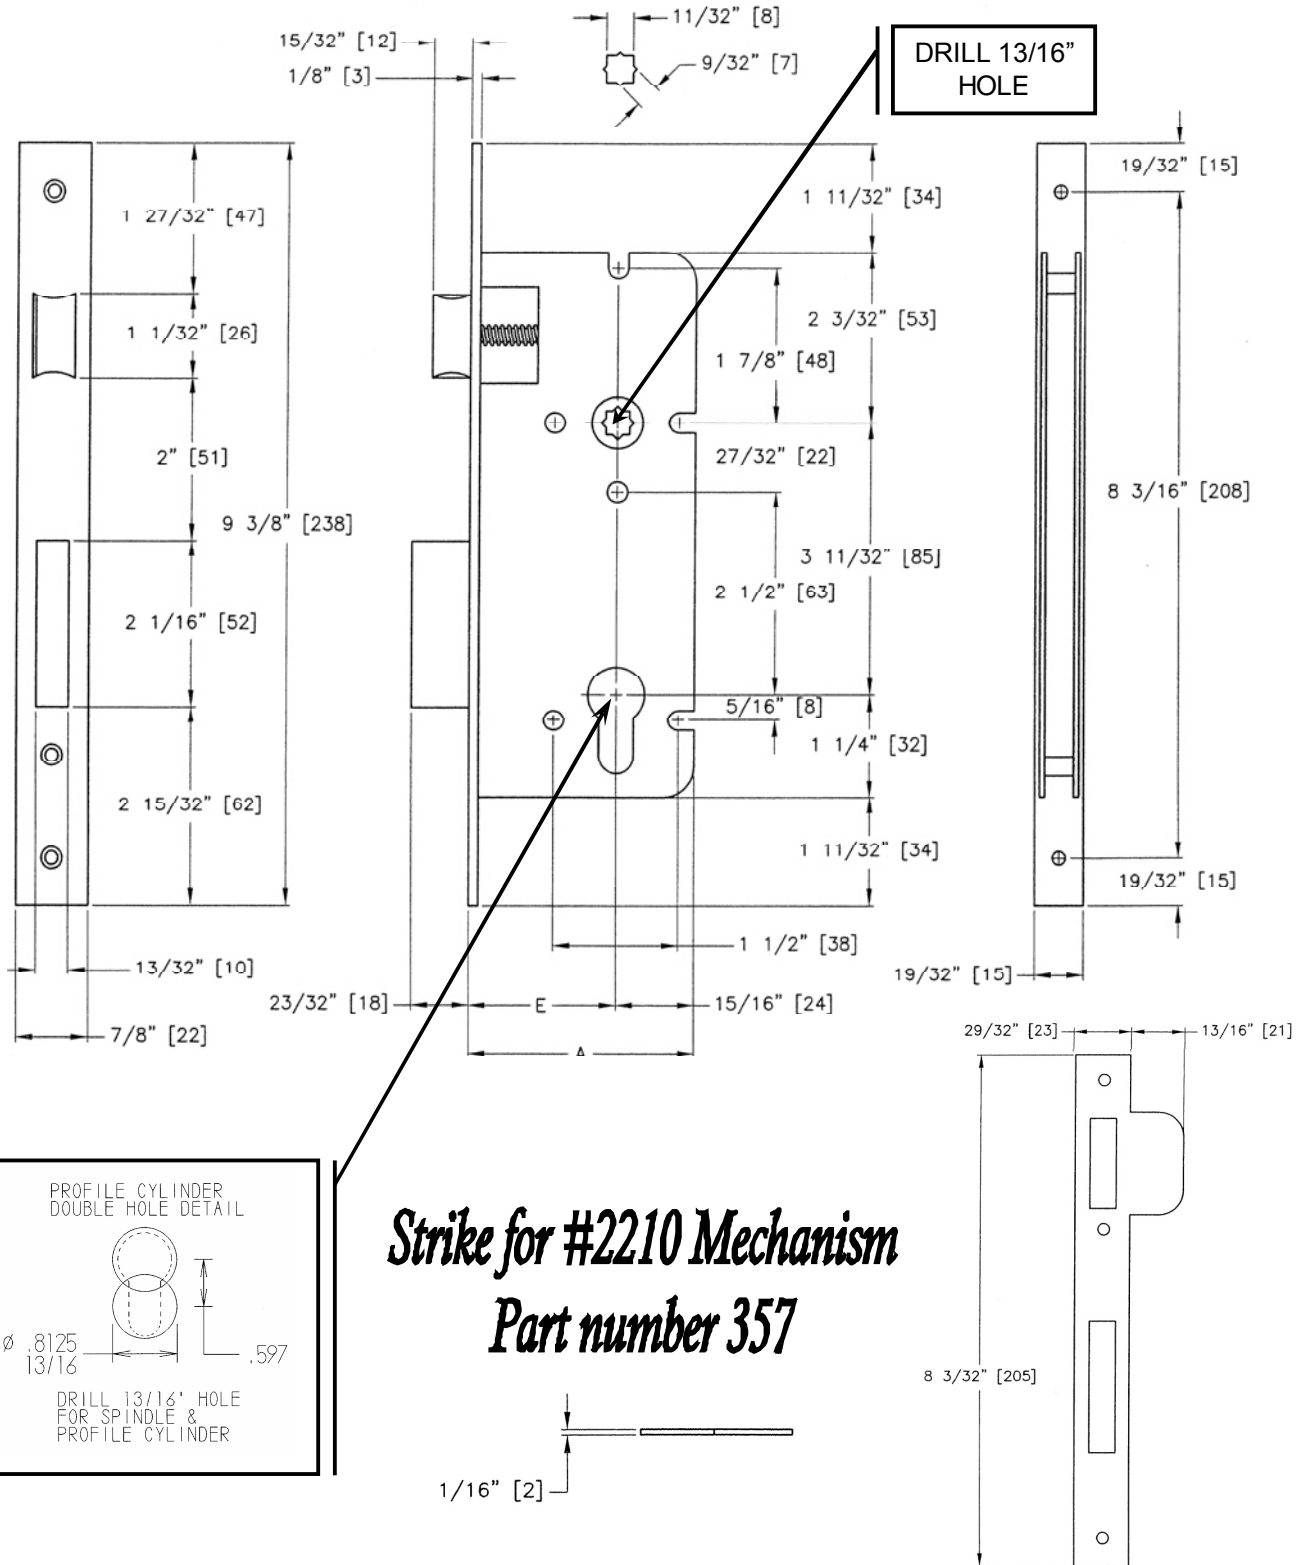

Inches [mm]

$E = \text{Backset}$	1-9/16" [40]	1-3/4" [45]	1-31/32" [50]	2-3/8" [60]	2-3/4" [70]	3-5/32" [80]
$A = E + [24]$	2-1/2" [64]	2-23/32" [69]	2-29/32" [74]	3-5/16" [84]	3-11/16" [94]	4-3/32" [104]